



## Setting the Date and Time Supergraphic Studio S9000 and Mitac Slave Computers: Windows on the Host PC

To set the date and time:

- First be sure to change the windows time on your host pc (using the clock in the lower right corner of your screen).
- For modem systems or any system with a slave computer:
  - From the SUPERGRAPHICS STUDIO MAIN MENU
  - If you're not on the gray screen, do FILE then CLOSE.
  - Now Select OPTIONS
  - Select SIGN CONTROLLER SETUP & connect to the sign.
  - Once you are connected:
    - Select the Setting Tab
    - Across from "Date & Time," click on CHANGE
    - A Date/Time Properties window will open
    - Change the date and time in this window and click on APPLY or OK.
  - **Then you must click on Send Date & Time To Sign**
  - This will place the correct date on the slave computer and the sign.

If you have further questions, please contact Time-O-Matic Tech Support at 866-637-2645.